Huawei Luna

Ablauf:

Einstellungen am SmartLogger

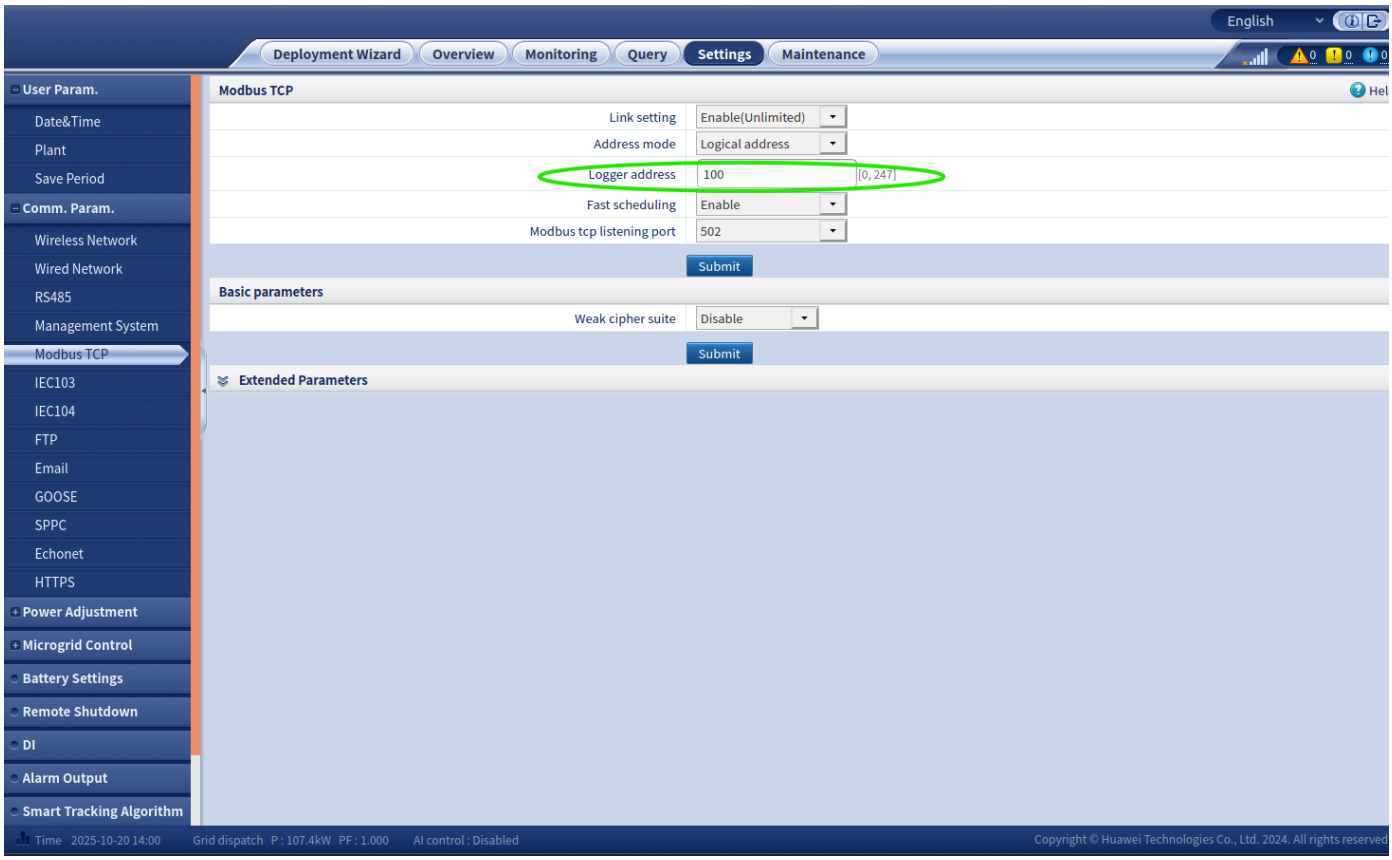
- unter Setup auf Modbus TCP und Geräteadresse 100 einstellen

Einstellungen am SmartDog

- Wechselrichter per RS485 am SmartDog anschließen

> Wechslrichter nicht am SmartLogger anschließen!

- Kompatiblen Zähler einlesen und als Globalen Liefer- und Bezugszähler konfigurieren
- Batterielizenz aufspielen (kann in unterschiedlichen kW Abstufungen erworben werden)
- unter Hausbatteriesysteme, Luna Speicher auswählen und mit Speichern bestätigen


English
Deployment Wizard
Overview
Monitoring
Query
Settings
Maintenance
User Param.
Date&Time
Plant
Save Period
Comm. Param.
Wireless Network
Wired Network
RS485
Management System
Modbus TCP
IEC103
IEC104
FTP
Email
GOOSE
SPPC
Echonet
HTTPS
Power Adjustment
Microgrid Control
Battery Settings
Remote Shutdown
DI
Alarm Output
Smart Tracking Algorithm
Modbus TCP
Link setting
Enable(Unlimited)
Address mode
Logical address
Logger address
100
[0, 247]
Fast scheduling
Enable
Modbus tcp listening port
502
Submit
Basic parameters
Weak cipher suite
Disable
Submit
Extended Parameters
Time 2025-10-20 14:00
Grid dispatch P : 107.4kW PF : 1.000
AI control : Disabled
Copyright © Huawei Technologies Co., Ltd. 2024. All rights reserved